
Cambridge Pre-Packaged Natural Gas or Liquid Propane Gas Firepit Use For Pyzique Wall, OE Radius Wall & Garden Wall

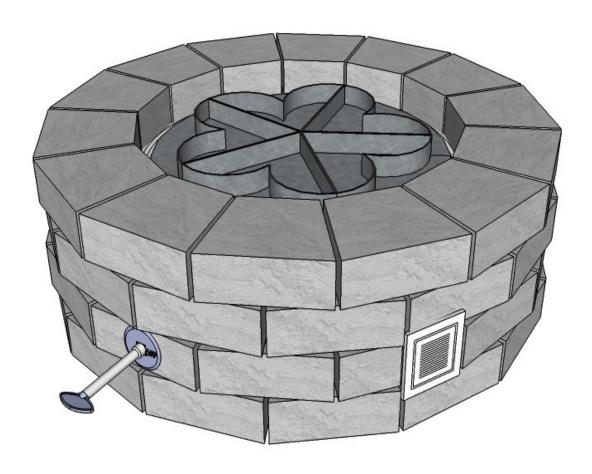


Cambridge Pre-Cortado Kit de Mesa pa-ra uso Afuerra de MaytRx Pared



Foundation:


Find an area that is level and not too close to trees or struc-tures. Place a stake in the middle of a 52" circle. Tie a rope on the stake and tie the other end 26" from the stake to a shovel, this will allow a circle to, be cut in the topsoil. Exca-vate to a depth of 4" below undisturbed soil.

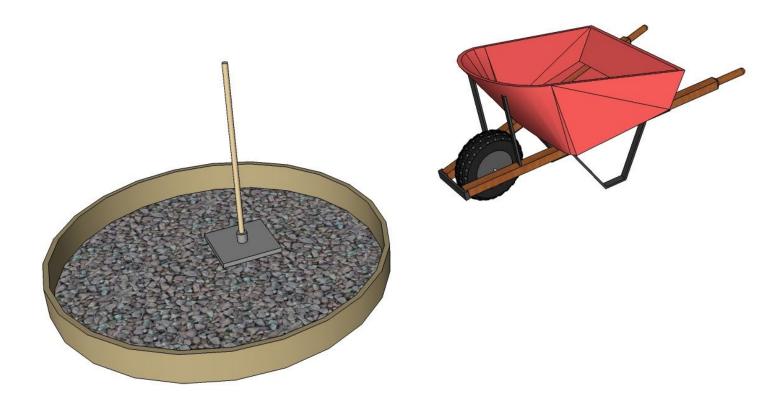

Foundation:

Certified Plumber should install Gasline at this time keeping the line at least 20" long to go through 10" of stone and exit in the middle of the circle

Fill the Cavity with quarry process and Compact every 3", finish by leveling 1" before surface grade

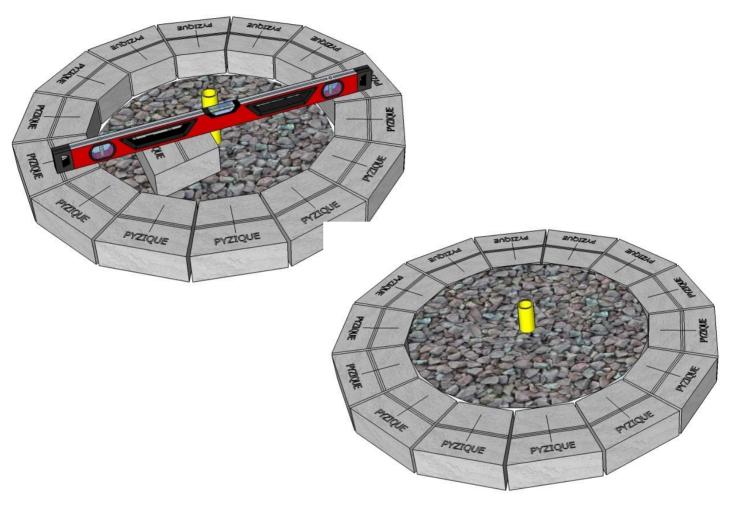

Layer1:

Piece Count = 14 Pyzique Stones


13 Olde English Radius Stones

13 Garden Wall Stones

Place the stones to create a ring. Fill with 3/4"crushed stone tot op of first course.

Keep1/8" between all stones

A4-foot level shouldhelp you get all the wallstones at the right height. Use concrete sand to fine level any wallstones that are low and use a rubber mallet for any wallstonest h a t are too high.

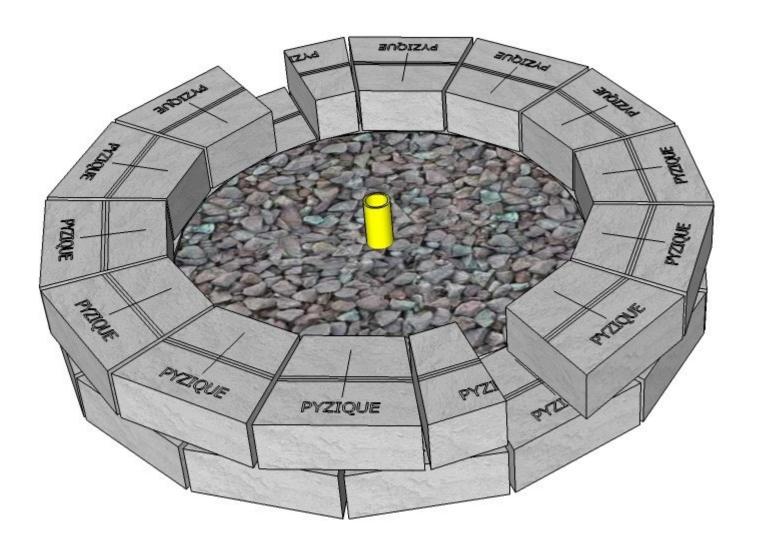

Layer 2:

Piece Count =

- (12) Pyzique Stones
- (11) Olde English Radius Stones
- (11) Garden Wall
- (2) Cut Stones


Place the second layer of wallstones, aligned to the center of each stone below to create a ring with the two cut stones leaving a gap to place the vents.

Vents must be placed opposite each other for proper venting. Make sure the vents are in a position that is acceptable to the home owner's view.


Capa 2:

Numero de Piezas = (4) Piedra de columna

Pegue las piedras de la columna como se muestra para la segunda capa, aplicar el adhesivo. Aseg- úrese de hacer esto y todas las capas lo más nivelado posible.

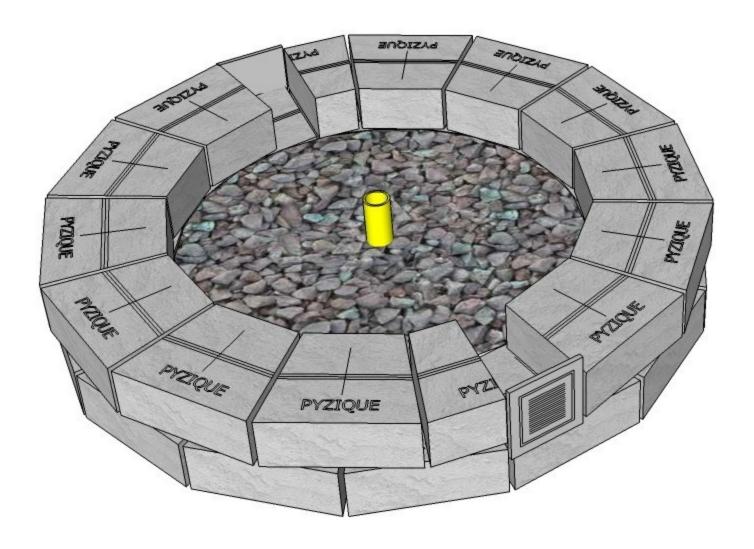

Layer 2A:
Piece Count= (2) Vent
Apply glue and place vents in
openings on layer 2.

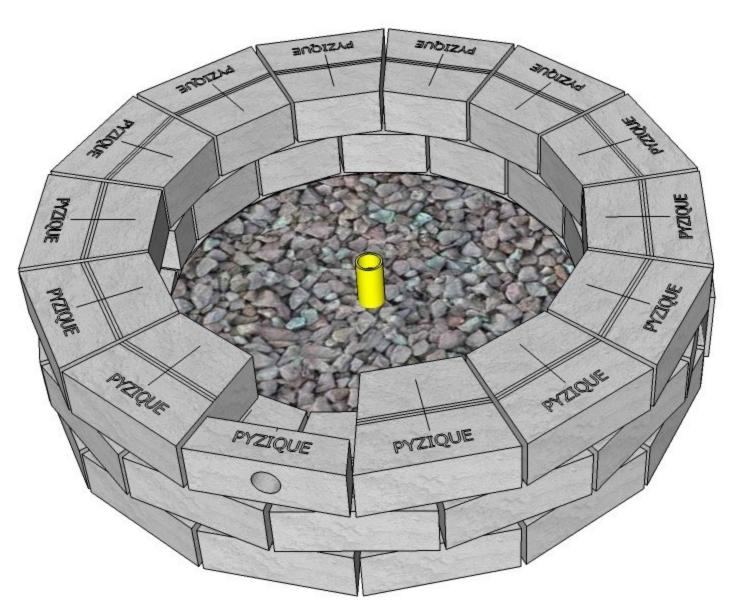


Layer 3:

Piece Count = (13) Pyzique Stones


- (12) Olde English Radius Stones
- (12) Garden wall (1) Key hole pc

Place the third layer of wallstones, aligning the vertical edges in the same position as the first layer. Install thep r e cut stone for the gas shutolt key.

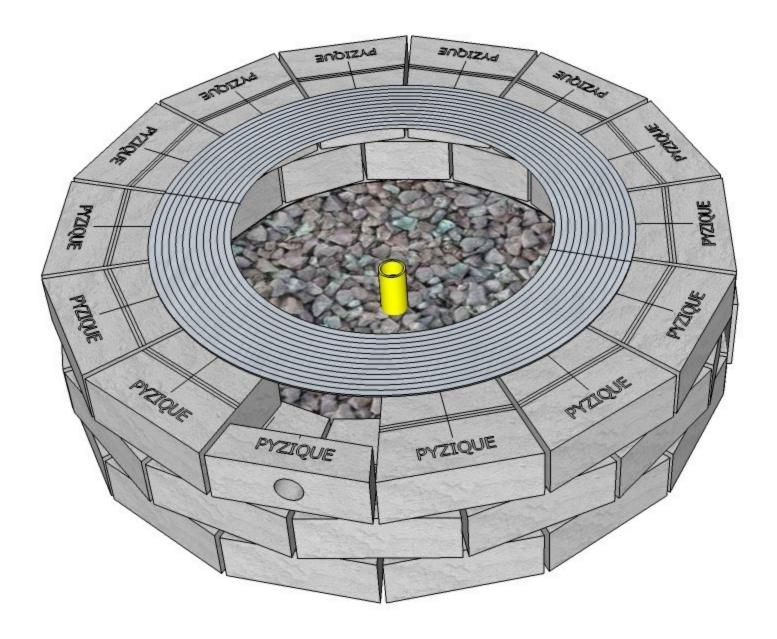

Laver 3: Inserts
Piece Count = (1) 90 Guage Galvanized Split Support Ring

Sweep top of third layer free of any loose particles and install 90 gauge galvanized split support ring evenly centered

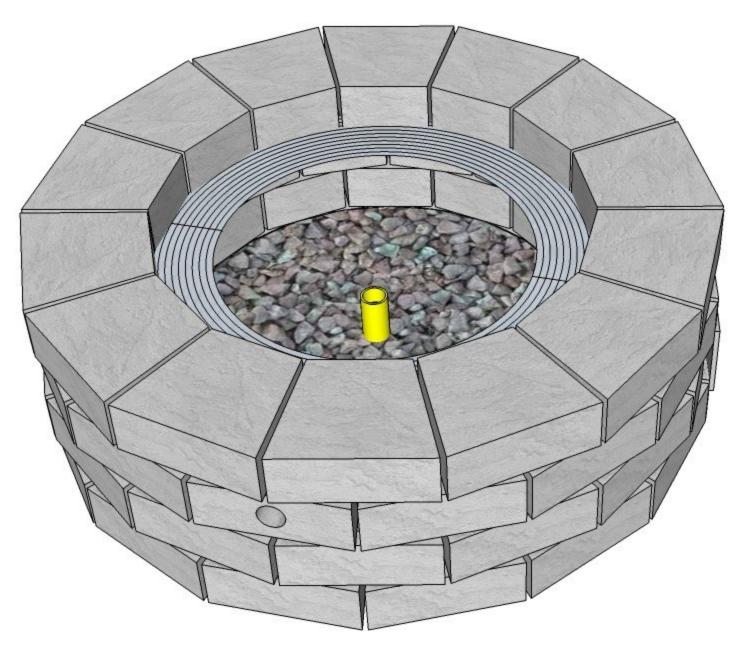


Layer 4

Piece Count = (14) Pyzique Stones

(13) Olde English Radius Stones

(13) Garden wal

Place the fourth layer of wallstones in the same position as the second layer. Install this layer on top of the galvanized split ring.

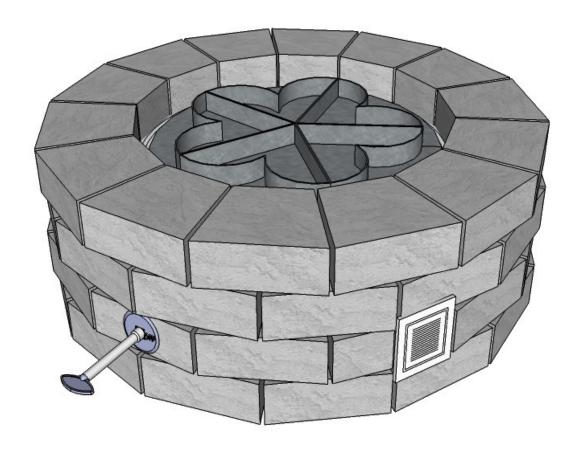

Layer 4 A:

Piece Count = (1) Burner

Have burner and gas parts installed by a licensed plumb-

Initial use: First few fires should be small in case any left over moisture is present in the mortar.