



PRE-PACKAGED OLDE ENGLISH SQUARE FIRE PIT KIT INSTALLATION INSTRUCTIONS

Base & Fill Preparation / Layer Assembly

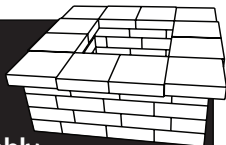

- Step 1.** Mark off area approximately 48 inches by 48 inches.
- Step 2.** Excavate 4 inches deep and compact soil with plate compactor or hand tamper. Add approximately 1/4 ton of 3/4-inch quarry process stone, 3 inches deep, and compact and level to within 1 inch of grade.
- Step 3.** Install layers as indicated below. **Note: Be sure to make each layer as level as possible.**
- Layer 1, 2, 3 & 4.** Install 12 Olde English Wall™ Blocks according to the diagram shown. Apply adhesive.

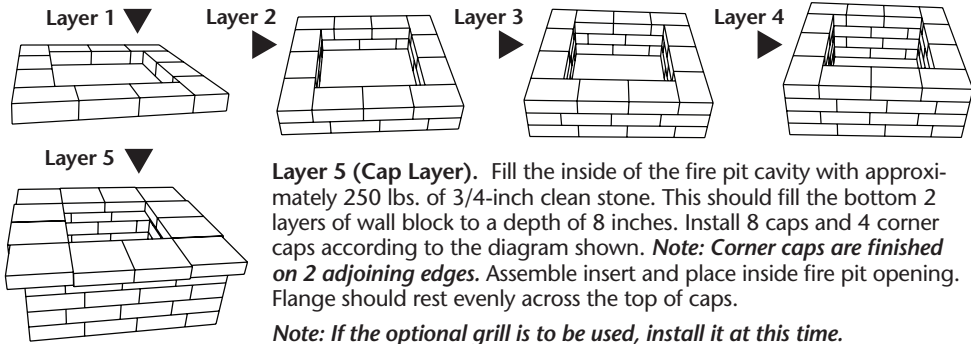

- Step 4.** Once the fire pit insert is in place, add approximately 50 pounds of 3/8-inch pea gravel to the inside of the fire pit cavity until it reaches a depth of 11 inches from the top edge of the insert.