

PERGOLA

INSTALLATION INSTRUCTIONS




Install the Cambridge Column Kit following the instructions from Cambridge Paving Stones. If using a cap stone, drill a 5/8 or larger hole into the center and slide over the threaded rod.



Slide column over threaded rod and attach final rod section. Slide Cap and Base onto column before attaching top plate. **Tightly** secure top plate using provided nut and washer to complete column assembly.


PERGOLA
INSTALLATION INSTRUCTIONS
BEAM INSTALLATION

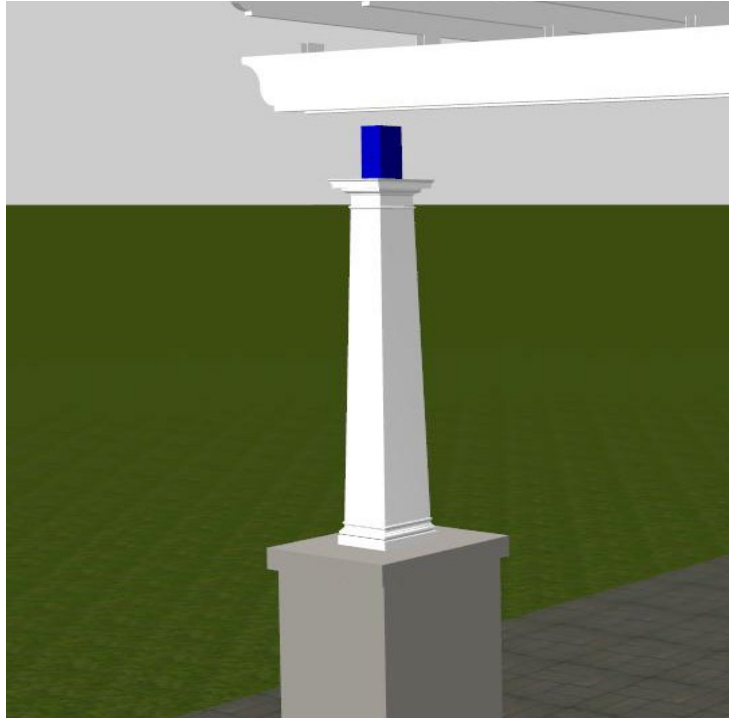

Seat Beam Assembly over Column Assembly. Place vinyl 4x4 post sleeve between the beams centered on the threaded rod. Slide the metal 4x4 post base into the post sleeve and secure to the beams with two screws on each side. Secure the post base with washer and nut over the threaded rod. **Do Not Over Tighten.**




PERGOLA
INSTALLATION INSTRUCTIONS
RAFTER and PURLIN INSTALLATION

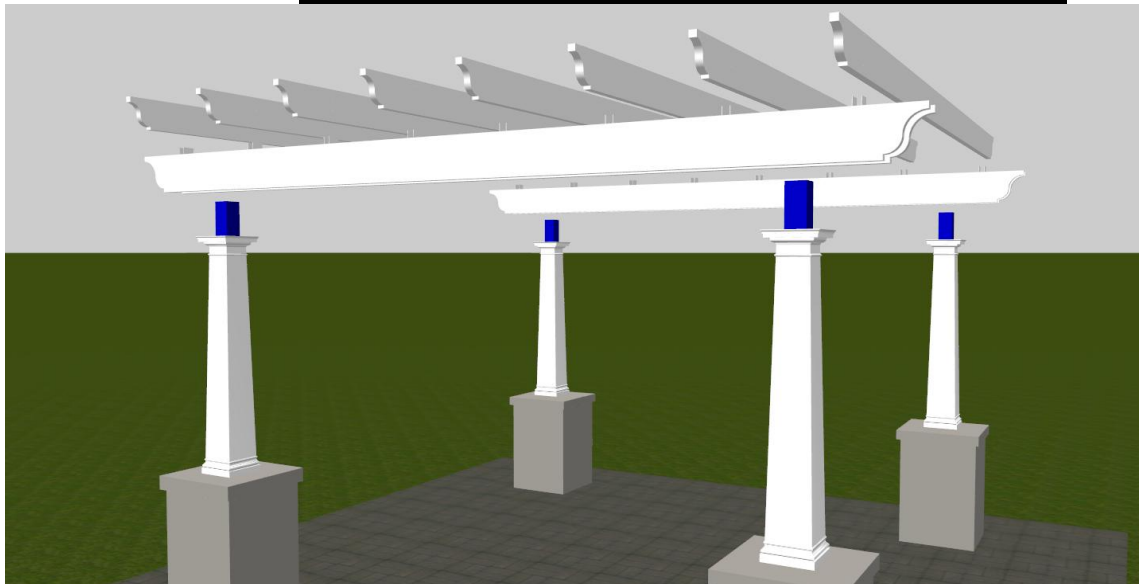

Align rafters with the spacers between the Beam Assembly. Secure by putting the long self tapping wood screws through the bottom of spacer, and into the rafter above.

Be careful not to over tighten

PERGOLA
INSTALLATION INSTRUCTIONS
RAFTER and PURLIN INSTALLATION

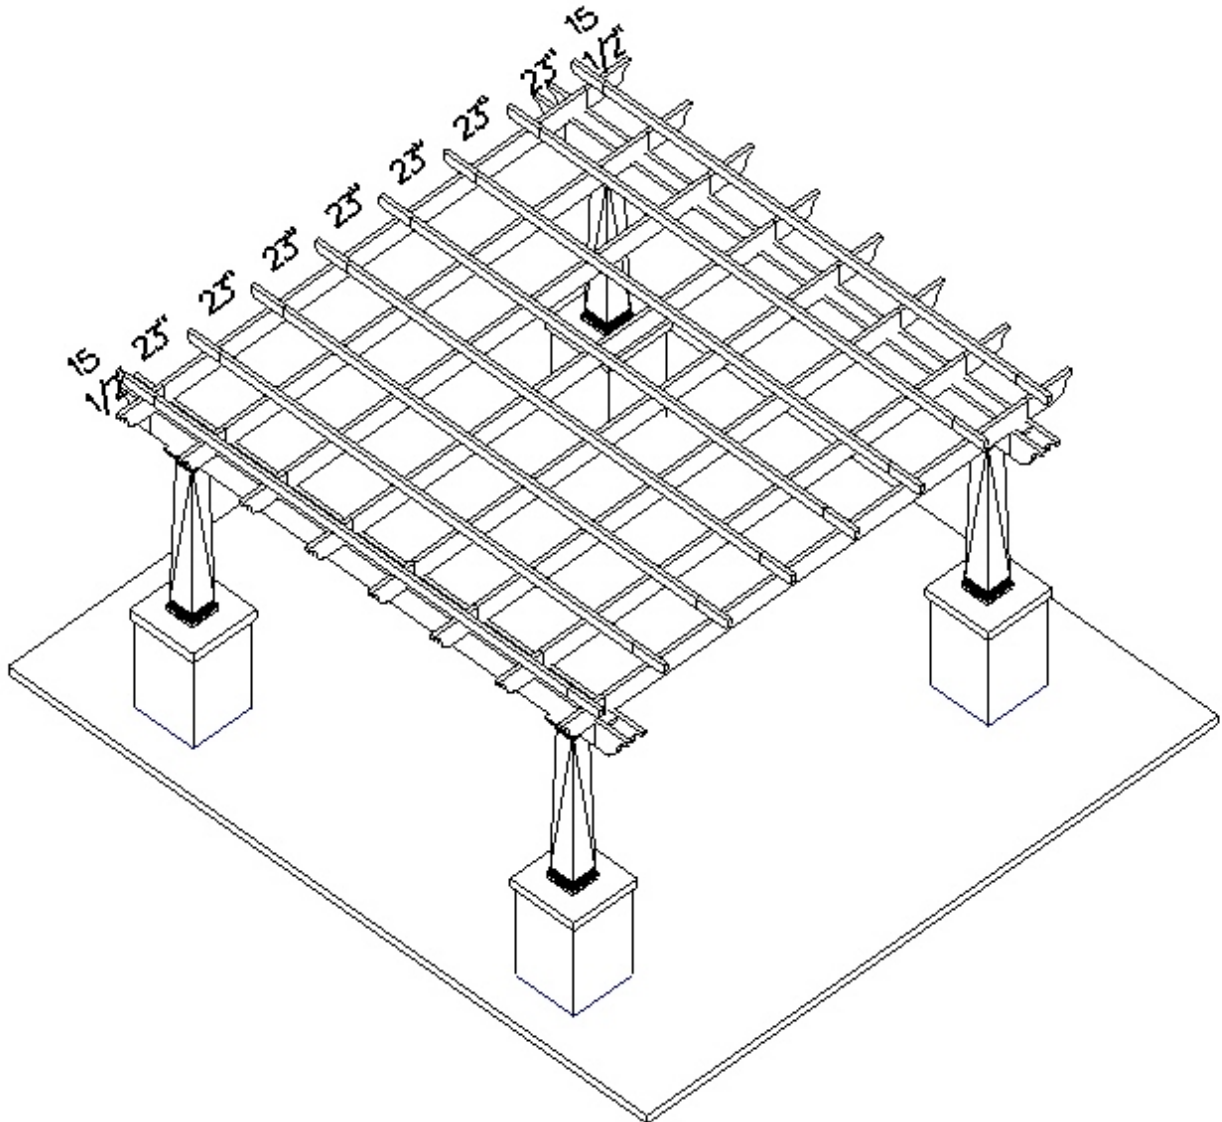

Once the rafters are installed, install the 2x4 Purlins using the 5 inch self drilling screws. Install one screw in each purlin along each of the outside rafters. Use the remaining screws to fasten the middle of the purlins to one of the middle rafters. Space the first purlin 15 and 1/2 inches in from the tip of the rafter. Position each of the remaining purlins at 23 inches from the face of the previous purlin (23 inches equals the width of one purlin plus the distance between the purlins)

Purlins are not included when the pergola is shipped with a canopy